



**Sign-in-China**

Online Wholesale for AD & Signage Products

## ???????? ?? ?????? ??? ?????????? ??????? Mutoh RJ-8000

Item Code: ACC-ROL-127-MU



FOB Price: ???153/??.

Mini Order: 1 ??.

Shipping Weight: ★★★★★

Average Rating: 0.0lb (0.003kg)

[Inquire Now](#)

### Overview



???????? ?? ?????? ??? ?????????? ??????? Mutoh RJ-8000

?????????? ??? ??????????? ?????????? ????????????: Mutoh VJ-1204/1304, RJ-8000/8100/900C, Mutoh Rock Hopper I/II, Mutoh FalconII, Mutoh Falcon Plus

?????????????: OEM

??? ??????:3?

????????: 48??\*35??\*12??



*Outside diameter: 3.3mm*

*Inside diameter: 1.72mm*



Large mesh filter raise the filter capacity, protect the print head from blocking. And make inks flow smoothly, bring the printers excellent performance.

Large internal metallic filter improves the printer performance and helps prevent ink starvation when printing in high speed.



The O-ring rubber seal ink pipeline better.

High quality with good corrosion-resisting, favored cost, long life span. It can replace the original damper.



It is made from P. P materials, favored cost, Environmental-Friendly.

?????????:

### **4.7.3. Replacing the H ink tube, tube branch and damper assembly**




#### **Notes :**

- Remove following covers before replacing the H ink tube, tube branch, and damper assembly.
  - Side cover R: refer to "Removing side cover R"
  - Side cover L: refer to "Removing side cover L"
  - Front cover: refer to "Removing the front cover"
  - Carriage cover: refer to "Removing the carriage cover"
  - Y rail cover: refer to "Removing the Y rail cover"
  - Head cover: refer to "Removing the head cover"

**Step 1 :** Drain the ink from all ink paths according to "Head wash menu".

**Step 2 :** Follow step 1 in "Replacing the print head assembly and head tape power cable" to remove the damper clamp.

**Step 3 :** Remove the ink tube and tube branch from the branch fixing material.

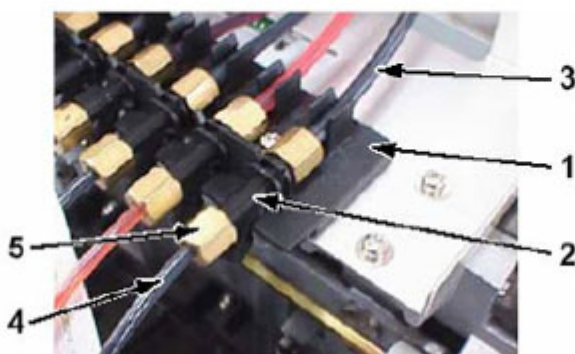


1 = Branch fixing material	2 = Tube branch
3 = Ink tube	4 = H ink tube
5 = Coupling screw, O-ring	

**Step 4 :** Remove the coupling screw and O-ring on the ink tube and the H ink tube sides from the tube branch.

**Step 5 :** Replace the tube branch.

**Step 6 :** Remove the damper assembly from the print head assembly.

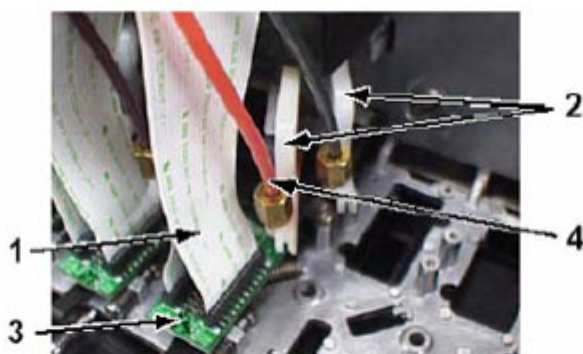

1 = Head tape power cable	2 = Damper assembly
3 = Print head assembly	4 = H ink tube, O-ring

**Step 7 :** Remove the H ink tube, coupling screw and O-ring from the damper assembly.

**Step 8 :** Replace the damper assembly.

**Step 9 :** Replace the H ink tube and O-ring.



**Notes :**


- Please soak the O-ring in cleaning liquid before installation.

**Step 10 :** Reinstall all parts in the opposite order of the removal procedure.



**Notes :**

- When tightening coupling screws, finger-tighten those. If using tools, it may result in cracking where the screws fix damper and fail to fill the ink.
- Do not grasp the film area of the damper strongly. Doing so may cause faulty damper and fail to print.

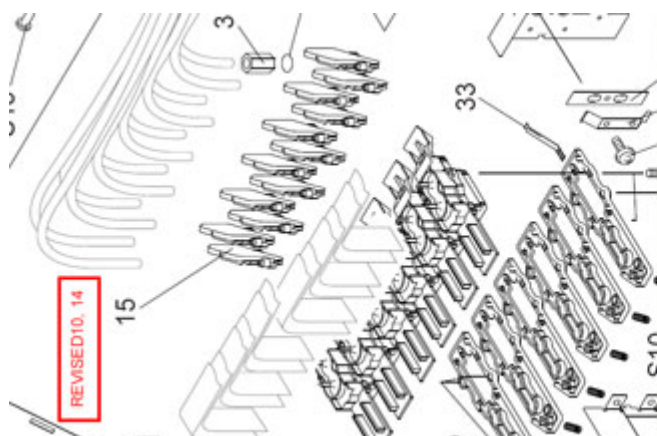



Copyright © 1999-2012 by Beijing ChinaSigns Information Company Limited All Rights Reserved.

Email: [info@sign-in-china.com](mailto:info@sign-in-china.com) Tel: +86 132 6410 3286 [www.sign-in-china.com](http://www.sign-in-china.com)