





HEAD BOARD REPLACEMENT


HEAD BOARD CONNECTOR LAYOUT

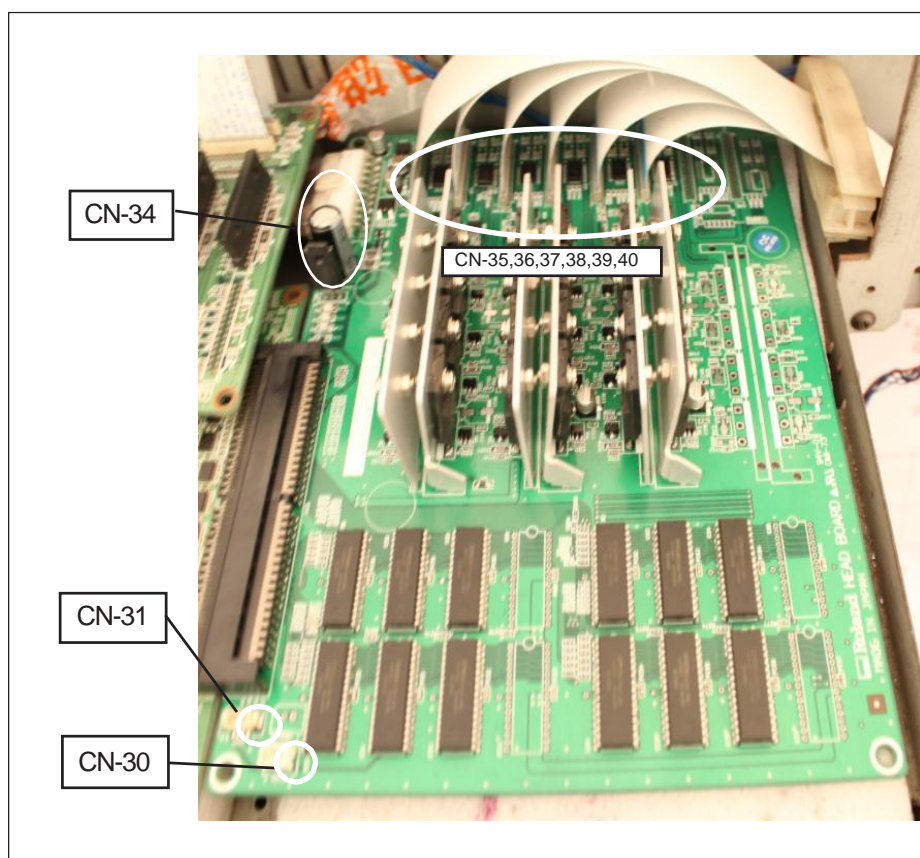

- 1 Disconnect the CABLEs from the HEAD BOARD.

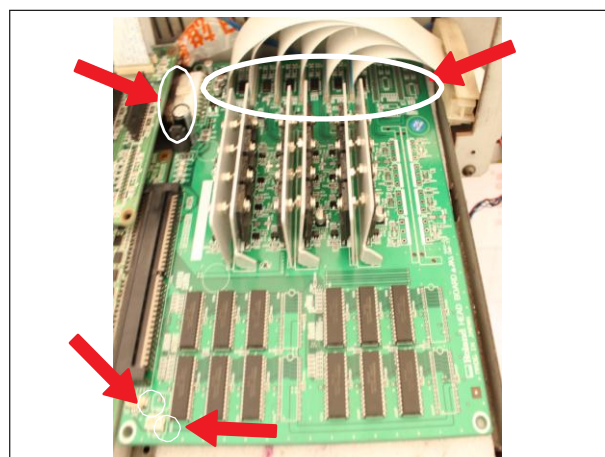


- 2 Remove the screws and disconnect the CONNECTOR.

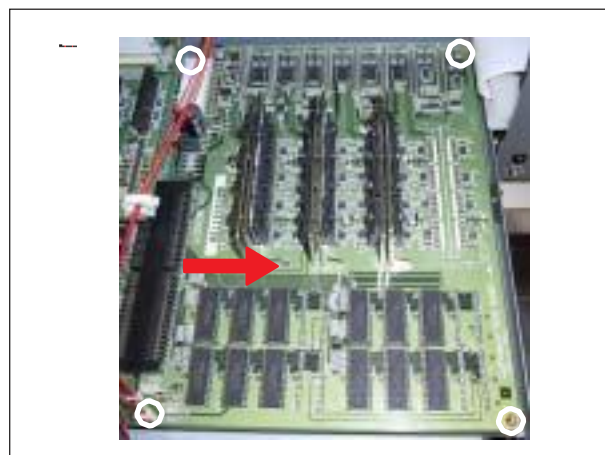




3

Replace the HEAD BOARD to the new one.

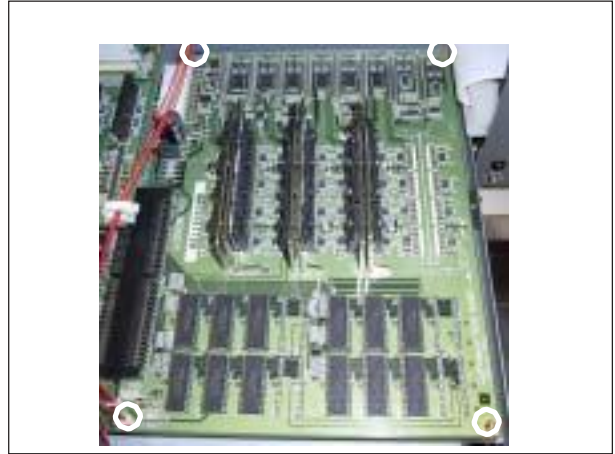

4

Connect all the CABLEs to the HEAD BOARD.

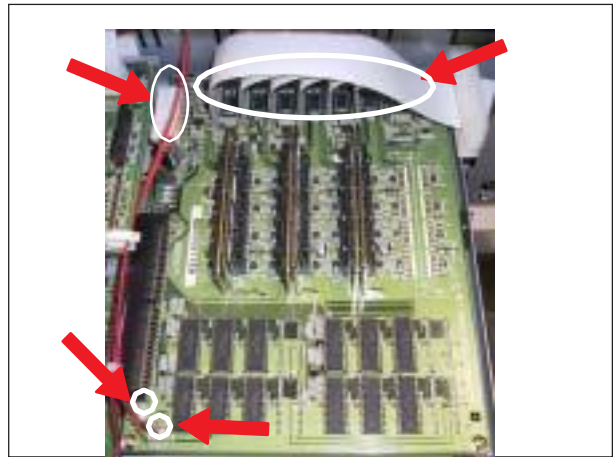

5

Carry out the following checks.

1. THERMISTER CHECK
2. HEAD UP/DOWN SENSOR CHECK
3. FAN ON THE HEAD BOARD