





HEAD BOARD REPLACEMENT


HEAD BOARD CONNECTOR LAYOUT

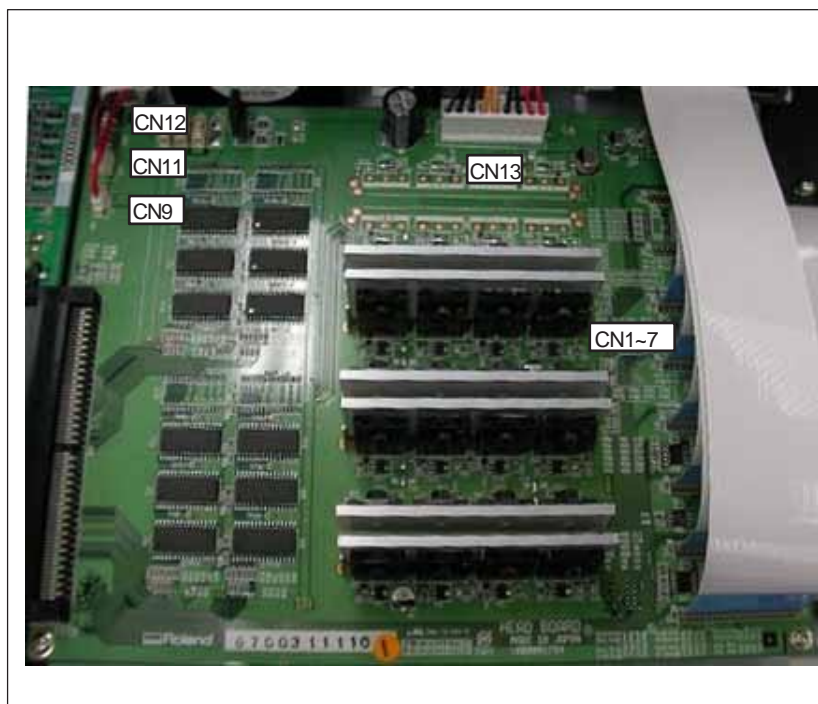

- 1 Disconnect all the Cables from the Head Board.

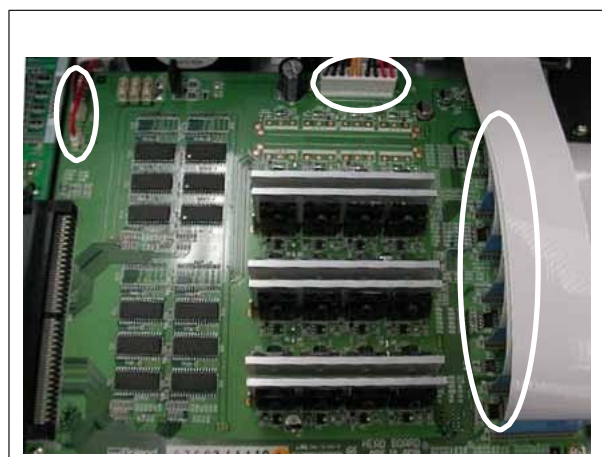


- 2 Remove the screws shown in the figure to replace with the new Head Board.

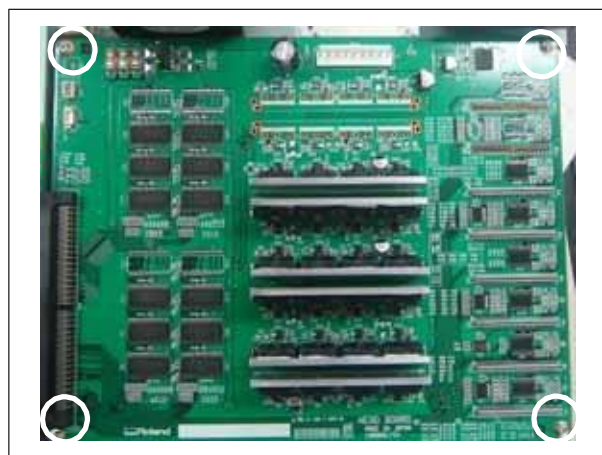



- 3** Connect all the Cables to the Head Board.

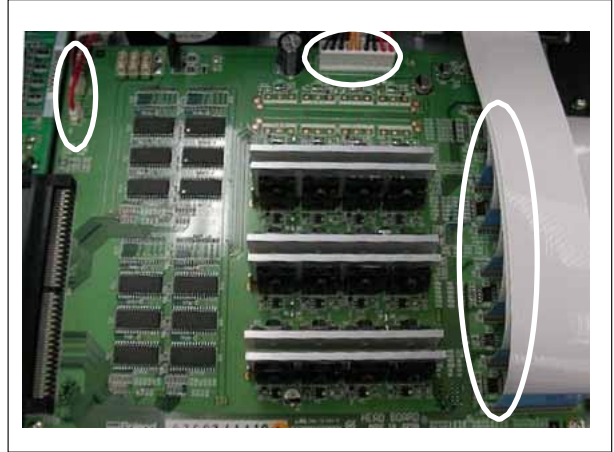

- 4** Carry out the following checks.
1. THERMISTOR CHECK
 2. HEAD UP/DOWN SENSOR CHECK
It can be performed in the SENSOR CHECK.
 3. FAN ON THE HEAD BOARD