

4. Heating board more safe and durable

Cap Press Machine HTM-CP815B (new clock)

Usage

- 1. Place printing material on working table; get right pressure you need take out material
- 2. Turn on power, about 10 sec then you could set Controller to get right temp and time you need
- 3. Then the machine will heat up (200°C about 15 minutes)

4. After machine reach temp you set, then place cap on the working table flatly, place the photo you printing on cap, then press down the handle. When the machine reaches the time you set, it will alarm, you could take out the cap and peel off the paper, and then photo will transfer on the cap.



If the paper is cold peel, then you need to wait 15-20 sec and peel off paper. If it is hot peel, then you need to peel off paper at once after printing. (Had better peel paper in diagonal line) Successful printing needs right time, temp and pressure, you need to test printing to get right time and temp first

Problem and solve

Machine not working Heating board not working burn	Check the power or Fuse inside clock problem/solid relay system not working/heating board
Not alarm Parameters	clock problem or time switch broken
Voltage: 220V、110V	
Time range: 0-999 sec	
Power: 450W	
Temp range: 0-399℃	
Printing size: 8cm×15cm	
Package: 640mm (L)×480mm(W)	×380mm(H)
Weight: 10KG	
Time and Temp Setting	





Press "ok" button once more to finish setting.



Press "ok" button display P-1, adjust the temp you need 2421B

HEATING-U



Press "ok" button again, display P-2, adjust the time you need



Press "ok" button once more to finish



When the machine close, it will start to timing, then you do not need to press ENTER