

HP5X00 & HP1050 Decoder Instruction

1. Please plug the wire jumper into related JP1 socket according to the cartridge model

JP1 socket	Cartridge model
83UV	HP5000/5500 (UV outdoor)
5500	HP5000/5500 (DYE indoor)
1050	HP1050/1055
5100	HP5100

E.g. in the exemplary picture (right), the jumper of HP5500 (DYE indoor) is plugged into JP1—5500.

2. Power off the printer, open its rear cover next to the cartridge, and remove the plug on the Ink Supply System (ISS) circuit board
3. For HP5000/5500, put the plug in step 2 into “5x00 socket” of the decoder (e-card) as shown in the left in the second photo.
4. For HP1050/1055, put the plug into “1050 socket” if the decoder (e-card).
5. Start the printer.

Notice :

1. To work with other decoder is not allowed.
2. For HP5500/5000 printer, the panel will show 100% full of ink capacity every time when it is started, because the decoder resets as the machine is shut down.
3. When the ink capacity on panel decreases to 25%, it will not go down any more.
4. For remolded HP1050/1055、HP5000/5500 with huge ink supply, cartridges may not be needed in the cartridge seat.
5. For HP5000/5500 printers without huge ink supply, users should keep an eye on the ink volume in cartridges as the decoder does not warn when the inks are used up.

