

LED Open Sign Instructions

Hanging & Installation

- Remove chains from the parts bag located within the packaging.
- Install the chain through the hanger tabs located on the top of the open sign.
- Attach the two chains to the ceiling using the appropriate hanging hardware.
- Insert barrel plug into power input and plug adapter into the electrical outlet.

Control Panel (back of sign)

Mode-Power switch

Switch MUST be positioned to **MODE** for flashing option or remote to function

Power

Input Volts:120VAC

Hertz:60Hz

Output Amps:2000mA

Output Volts:12VDC



Wireless Remote optional

Power Switch on control panel MUST be positioned to MODE for remote to function. Includes one 27A battery.

Control:ON/FLASH/OFF

~~~~~

**CAUTION** To reduce the risk of fire, electric shock or injury to persons:

- This product is for indoor use only. Do not use in damp or wet locations.
- Not for use with light dimmer circuits.
- To reduce the likelihood of injury or damage mount only on a surface that is mechanically sound.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- It is recommended to use a surge protector. Power surges ARE NOT covered under warranty for this product.
- Only use 120VAC input, 60Hz, 12VDC, 2000MA output adapter.
- Do not handle adapter or sign with wet hands.
- Disconnect power before handling or cleaning.
- Do not spray liquid or aerosol cleaners directly onto sign. Use a dry or damp cloth for cleaning.
- This product is fully assembled and ready to use. Do not attempt to disassemble or service.
- Do not alter the plug or power supply cord in any way.