

Automatic Flash Dryer Instruction

1. Control Panel:



Click the "+" to set the drying time



Click the "-" to set the drying time



Click the "RESET" to reset the drying time



Click the "START" to start the work

2. Automatic Mode: Setting the time from 1-200 s, automatic mode start. when plate move down the sensor, the heating lamps start heating, and stop heating when reach your setting time.

3. Continuous Mode: Setting the time on "000", Continuous mode start. the machine keep heating all time when plate is down sensor, the machine stop heating when plate leave.

4. Fanner mode

“Auto fanner” fanner automatic mode, fanner will work with sensor

“Cont fanner” fanner keep working all time.

5. Lamp's connecting way:

