

## **Congratulations on purchasing a MEM heat press!**

Please read these operating instructions carefully so you can start production with your press without problems.

Reproduction of these operating instructions in any form requires the written approval of MEM. We reserve all rights to change technical data and product features.

MEM does not assume any liability for direct or indirect damage resulting from use of this product.

Version 1.2 (09.06.2022)

## **Brief overview**

### **MEM TA-4050 manual double station heat press**

The design of the MEM presses combines a heavy-duty solid industrial grade pressing framework with high quality electric components. This provides the operator with the best possible features and equipment needed for today's various heat transfer applications.

Using the MEM TA-4050 heat press, all common heat transfer processes (flock, flex, sublimation, transfer, Inkjet--flex etc.) can be conducted professionally and with

highest productivity. The desired settings can be set easily with the temperature controller. The pressure can be regulated smoothly with the pressure adjust knob

### **Short overview MEM TA-4050 heat press**

- Industrial grade design.
- Pressure balancing system on heat plate and bottom plate.
- CE certificated and RoHS certificated.
- Lifetime factory on-line service.

## **Safety Precautions**

Please read these instructions and safety precautions carefully before using your press for the first time!

- Never reach into the heat press with your hands when it is connected to the power supply, particularly when it is switched on and heated up – danger of severe burns!
- Do not open the cover or attempt to modify the machine yourself without instruction.
- In case you are requested by the MEM customer support to open the heating plate cover, please make sure you are wearing respiratory protection and only touch the contained insulation wool with gloves. Any disposal of the wool must be contained in a closed bag.
- Ensure that liquids and metal objects do not get into the inside of the heat press.
- Ensure that the power socket used is grounded. Note that it is only permissible to operate a heat press from a power socket protected by a ground fault protection switch.

# MEM Manual Swing Away Heat Press Operational Manual

- Disconnect machine from power outlet when not in use!
- Never operate the heat press within the reach of children and never leave the machine unsupervised when switched on.
- Ensure that the machine is used only in dry rooms.
- Pay attention that the used compressor is attuned to the air consumption and the pressure


If you cannot observe one or more of the safety precautions above, or if you are not sure whether all points are satisfied, please contact our Technical Support Department.

## Machine description



- a. Press Handle
- b. Fuse
- c. Temperature controller
- d. Handle
- e. Power switch
- f. Heat plate
- g. Bottom platen
- h. Pressure adjust knob

## Controller

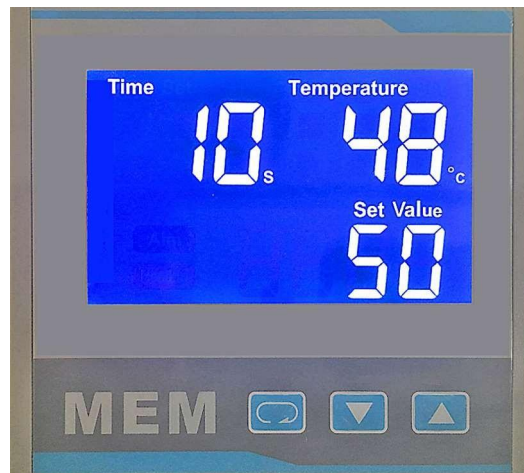

With the temperature controller, temperature (°C and °F) and pressing time can be adjusted. The Set Value are showing the setting value, the Temperature digits are showing the actual value. Counter (reset after power off) function that counts the number of transfers that have already been made during the current session could be enabled, contact MEM for counter function enable instruction.



Press and hold SET button to enter parameter setting interface, press and hold SET button to exit parameter setting interface.



Press down key to decrease the corresponding parameter value. Press up key to increase the

corresponding parameter value.



Press and hold up key to start self-tuning (°C or °F on the panel blinks.)

Once the machine begins self-tuning, do not unplug or press any key until the self-tuning is

done (°C or °F stop blinking). Before apply self-tuning, set temperature to normal working temperature and let the heat plate cool down to room temperature. Apply self-tuning when the machine could not control temperature properly. Self-tuning will change PID parameter automatically.

Do not change parameters except Pb and SL2 without our instruction.

Parameter code		Function
<b>Pb</b>	Pb	Temperature calibration: If measured temperature 1°C or 1°F lower than the showing temperature, decrease the value 1.
<b>SL2</b>	SL2	0: Celsius (°C) 1: Fahrenheit (°F)

## Operation

### Power supply

- Connect the heat press to a power socket using the connection cable supplied.

### Operating transfers

- Set the desired pressure by rotating the pressure adjust knob.
- Press by rotating the press handle.
- After the timer count to zero, lift the press handle

## Maintenance and cleaning


Maintenance work should always be accomplished with the press switched off and cooled down. The plug must first be disconnected from the power socket. Consult Technical Support before carrying out any maintenance work.

Clean the press regularly with a soft cloth and mild household cleaner to remove adhesive residues etc.

## Technical data

Model	TA-4050
Voltage and power	220V (2700W) or 110V (1800W) Check voltage at back side of the head
Time Range	0-999sec.
Max. Temp.	260°C / 500°F
Heat plate size	40x50cm (16"x20")
Dimensions(L*W*H)	770*420*540mm (30"x17"x21")
Shipping Dimensions(L*W*H)	840*550*560mm (33"x22"x22")
Shipping Weight	70kg (154lbs)
Max. press thickness	50mm

## Circuit diagram

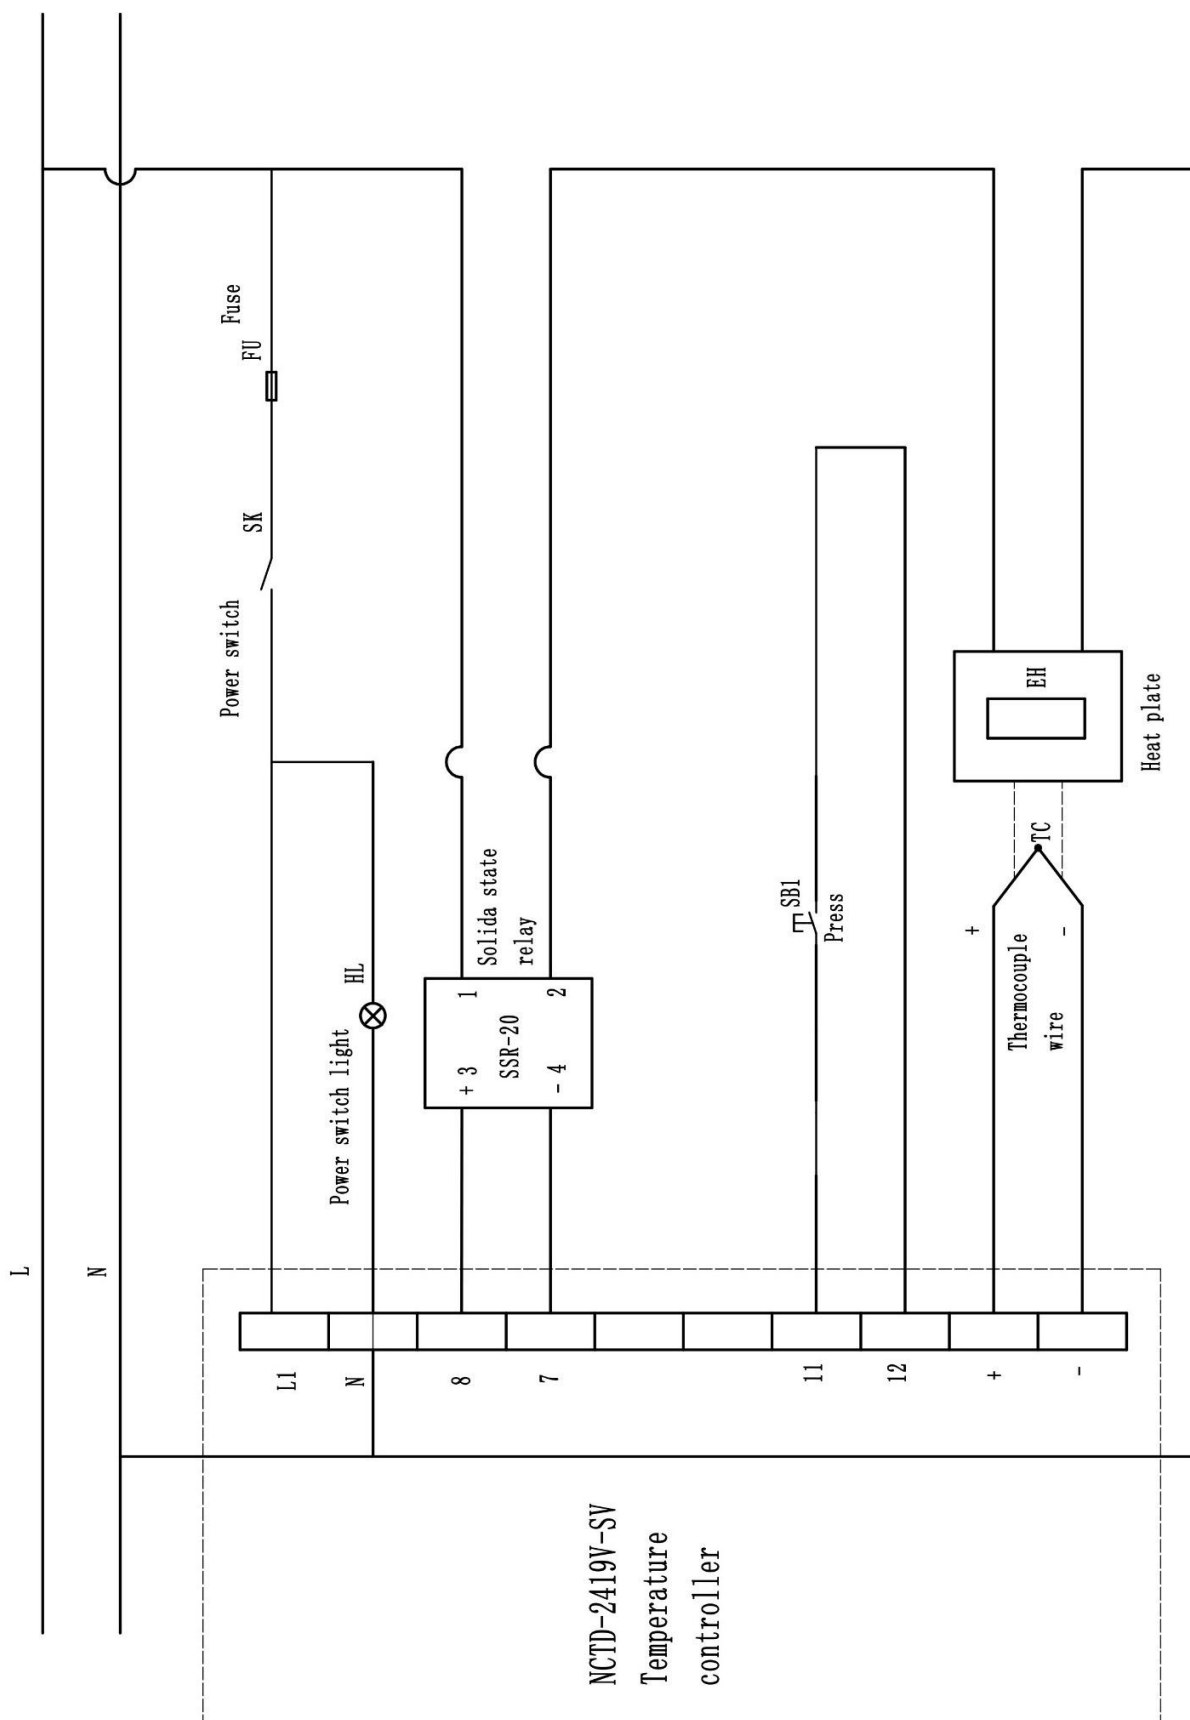

## **Statement of Conformity**

### **CE certification**

We herewith declare that the product meets the provisions of the following EC Directives and Harmonized Standards:

Certificate Number: M.2020.206.C9752



- 2006/42/EC Machinery Directive
- 2014/35/EU Low Voltage Directive
- Related Standards: EN ISO 12100:2010, EN 60204-1:2018

### **RoHS test**

We herewith declare that the product conforms to RoHS Directive 2011/65/EU Annex II amending Annex (EU)2015/863 and amending Annex (EU)2017/2102.

Report No.: B-R2203A0560

