


# Curved screen printing machine installation steps


**NO.1** Fix 2 pcs vertical support bar on the base  
the side of base has 4 grooves

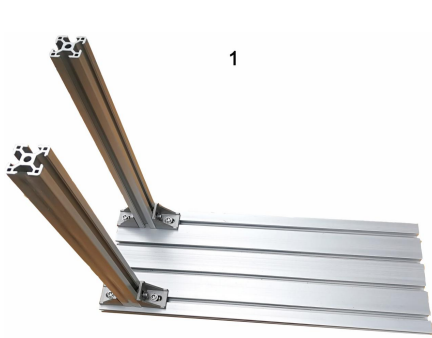

**NO.2** Fix the adjustable table  
on the base.




**No.3** Fix 2pcs fix clamps parts  
on adjustable table.

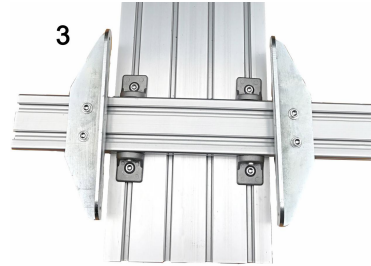


**No.4** Fix 5 clamps like the picture.




**No.5** Fix 2 bearings on guider box

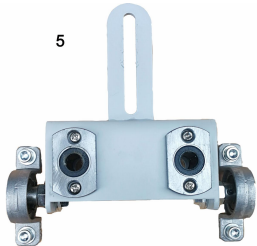


**NO.6** Fix guider box on vertical support bars  
Note the direction of box

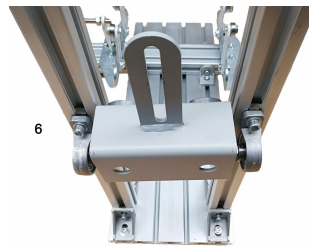


**No.7** Contact 2 guider bars with screen clamp

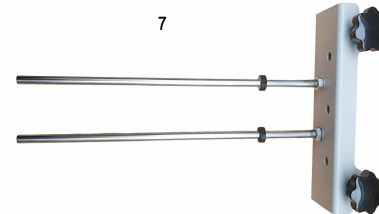


**No.8** the guider bar insert into guider box

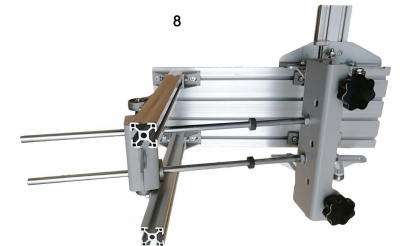

**No.9** Install the balance steel on guider bars

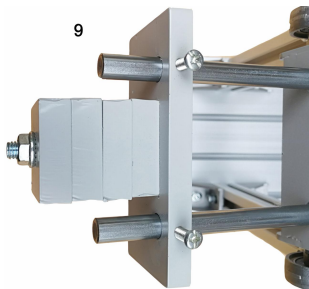

**No.10** Drill a hole on wooden handle squeegee  
then fix it on screw bar.

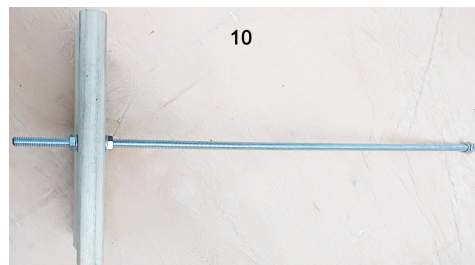

**NO.11** Fix screw bar on guider box, installation finished

