

# ?????????????????????? Mimaki JV3/JV33/JV5-M004868

Item Code: ACC-MIM-006




FOB Price: ???.3 131/??.

Mini Order: 1 ??.

Average Rating: 0.2lb (0.1kg)

**Inquire Now** 

### **Overview**

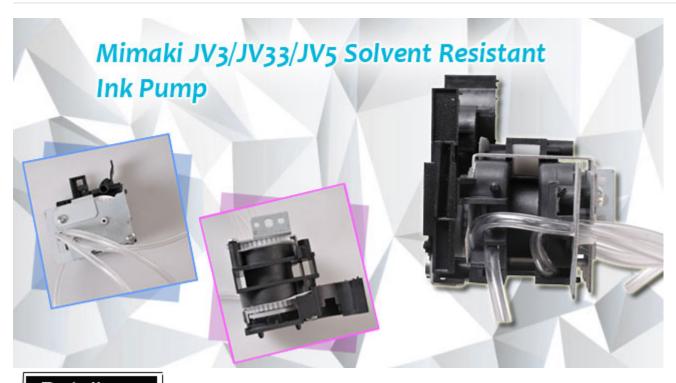

Details

Mimaki JV3/JV33/JV5 Solvent Resistant Ink Pump-M004868

This generic solvent resistant pump offers the same performance than the original Mimaki part no. M004868. **Applicable Model:** 

Remarks: OEM

Product Size: 60mm\*60mm\*50mm

Net Weight: 75g

Packing Size: 90mm\*80mm\*70mm

Packing Weight: 80g



If a head (or bank of heads connected to a pump) misfires or gets clogged and you rule out a faulty damper, wiper or broken head, you may have a malfunctioning pump. If after several head are cleaned, and the printhead is still the same, check the pump and replace if necessary.



 Manufactured by high strength material, whole product of solvent resistant.

 Pump hose is made from special materials, which is durable, anti-corrosion, and suitable for any kind of eco-solvent or water-based ink.





 Such product works for the original printer perfectly and its durability and lifespan is almost the same as the original.

### 4-2-6. Replacement S-pump assy. (Periodical replacement)

## A CAUTION



Be sure to wear protection glasses since you may get ink in your eyes.
If the ink sticks to your hand, the skin may be damaged.




#### [Parts to be used]


- S-pump assy (M004868)
- Insulock (L60-100 mm) x 2


#### [Adjusting procedure]

- 1) Remove instrumentation cover C at the back of the main unit.
- Remove two tube clamps in the instrumentation case and then cut two insulocks for securing the tube.
- 3) Remove the station cover.
- 4) Remove the suction side connection joint for the S-pump assy and S cap assy tube.
- Take out the waste liquid side tube of the S-pump assy from the instrumentation case.
- 6) Remove the screw mounting S-pump assy and then replace new S-pump assy.

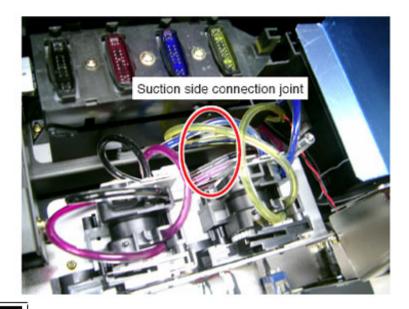

Application

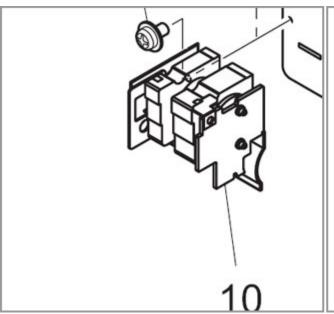

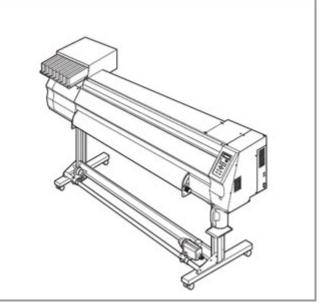

#### **Quality Report:**





## Tags

#### Ink Pump for























Copyright © 1999-2012 by Beijing ChinaSigns Information Company Limited All Rights Reserved.